


Synthetic blood penetration tester for medical mask

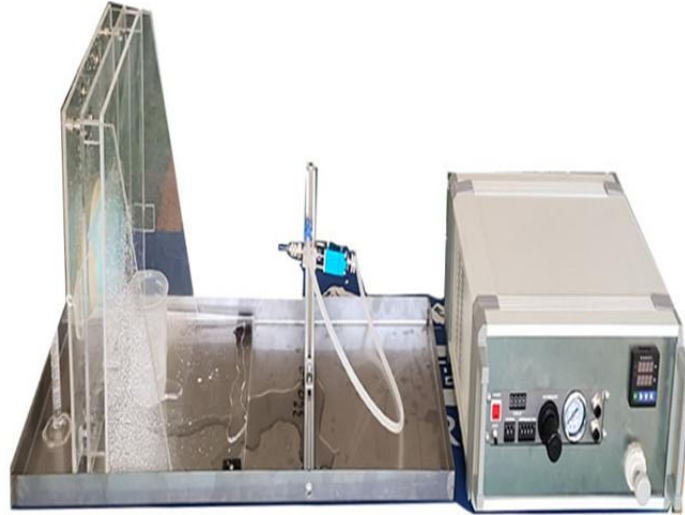

The picture is for reference only

USE

Medical mask synthetic blood penetration tester is used for synthetic blood penetration test of medical mask, it can output test report and save test data.

TEST STANDARDS

Meet the test standard YY0469-2011 .

FEATURES

1. The equipment is equipped with an air pump to adjust the air pressure.
2. The detector is equipped with a positive pressure sensor for collecting test data pressure.
3. The pressure has stepless adjustable function, and the technical parameters such as holding pressure and holding time can be set.

SPECIFICATIONS:

1. Blood 2ml test.
2. Control mode: manual control.
3. Pressure 20kpa, accuracy 0.1kpa.

Test process: Fix the sample on the sample holder of the instrument, spray 2ml of synthetic blood with a surface tension of $0.042 \pm 0002n / m$ at a distance of 30.5cm from the center of the sample. Then spray it at a pressure of 16kpa from the needle tube with an inner diameter of 0.84mm in the horizontal direction The target area of the sample. Take off , check the result within 10s.






MACHINERY DIRECTIVE ATTESTATION OF CONFORMITY

Technical file of the company mentioned below has been inspected and audit has been completed successfully.

2006/42/EC Machinery Directive Annex VIII has been taken as references for these processes.

Company Name : **JINAN HENSGRAND INSTRUMENT CO., LTD.**
Company Address : NO.4915, WEST JINGSHI ROAD, JINAN, CHINA
Related Directives and Annex : **2006/42/EC Machinery Directive/Annex VIII**
Related Standards : **EN ISO 12100:2010, EN 60204-1:2018**
Product Name : **TESTING MACHINE**
Report No and Date : TCF-JHIC230128-MD
Product Brand/Model/Type : WDS-1, WDS-2, WDS-3, WDS-5, WDS-10, WDS-20, WDS-30, WDS-50, WDS-100, WDS-200, WDS-300, WDS-500, WDW-1, WDW-2, WDW-3, WDW-5, WDW-10, WDW-20, WDW-30, WDW-50, WDW-100, WDW-200, WDW-300, WDW-500, WDW-600, WDW-1000, WE-300, WE-600, WE-1000, WE-2000, WEW-300, WEW-600, WEW-1000, WEW-2000, WAW-300, WAW-600, WAW-1000, WAW-2000, WAW-3000, WAW-5000, WAW-6000, LAW-1000, JB-300B, JBS-300, JBW-300, JB-500B, JBS-500, JBW-500, JBW-750, CST-50, VU-2Y, VU-1S, DWC-40, DWC-60, DWC-80, DWC-100, DWC-196, YES-2000, YES-300, YAW-1000, YAW-300, YAW-2000, YAW-3000, YAW-5000, NDS-200, NDS-500, NDS-1000, NDS-2000, NDW-200, NDW-500, NDW-1000, NDW-2000, NDW-3000, NDW-5000, NDW-10000, HEZ-3, HEZ-6, HEZ-10, JWJ-10, TLS, TLW, HST-P50, HST-P100, HST-P200, HST-P300, RDJ, NDT, DWTT, GBW-60, GW-50, HST, XNR-400

Certificate Number : **M.2023.206.C81366**
Initial Assessment Date : 31.01.2023
Registration Date : 01.02.2023
Reissue Date/No : -
Expiry Date : **31.01.2028**


UDEM International Certification
Auditing Training Centre Industry
and Trade Inc. Co.

The validity of the certificate can be checked through www.udem.com.tr. Upon completion of EC declaration of conformity, it is used solely at the manufacturer's responsibility. This certificate remains the property of UDEM International Certification Auditing Training Centre Industry and Trade Inc. Co. to whom it must be returned upon request. The above named firm must keep a copy of this certificate for 15 years from the registration of certificate. This certificate only covers the product(s) stated above and UDEM must be noticed in case of any changes on the product(s)

Address: Mutlukent Mahallesi 2073 Sokak (Eski 93 Sokak) No:10 Çankaya - Ankara - TURKEY
Phone: +90 0312 443 03 90 **Fax:** +90 0312 443 03 76
E-mail: info@udem.com.tr www.udem.com.tr



HST GROUP Co., LTD.

Jinan Hensgrand Instrument Co., Ltd.

NO. 4915, West Jingshi Road, Jinan 250012, PR CHINA.

Phone/WhatsApp: +86-159 1008 1986

www.hssdgroup.com - e-mail: admin@hssdtest.com

No. 4915, Jingshi Road, Jinan, China

Tel: +86-15910081986